

Using the Realizzer Visualiser Settings

	FLX Console Setting	Windows 10 Computer
Step 1	Transmit Artnet: Enable Transmit : Broadcast Mode Name : FLX Network Switch: 10 Net: 0 Subnet : 0 Port 1 : 0 DMX : 1 Port 2 : 1 DMX : 2 Port 3 : 2 DMX : 3 Port 4 : 3 DMX : 4	Set Ethernet wired Port to Use static IP address IP address : 10.0.0.1 Subnet Mask: 255.0.0.0
Step 2	Remote ; Disable SCAN : Disable Zero Wings Disable	
Step 3	If you go to FLX>Settings>Network Drives and do not see anything	
Step 4	Disable Artnet in Step 1 and Re-Enable Artnet	
Step 5	Check FLX>Settings>Network Drives, you should find something, if nothing Reset Desk and do steps 1 to 4	

DMX Channels in Realizzer and FLX

Lighting No:	Lighting	DMX Address Channels
1-8	Par 64	1-8
9-12	Source 4 Parnel	9-12
13	Martin Mac 250 Entour Mode 4 , 18 channel	50
14	Martin Mac 250 Entour Mode 4 , 18 channel	70
15	Martin Mac 250 Entour Mode 4 , 18 channel	90
16	Martin Mac 250 Entour Mode 4 , 18 channel	110
17	Martin Mac 550 , 27 channel	330
18	Martin Mac 550 , 27 channel	360
19	Martin Mac 550 , 27 channel	390
20	Martin Mac 550 , 27 channel	420
21	Martin Mac 2000 , Profile (24 channel)	130
22	Martin Mac 2000 , Profile (24 channel)	160
23	Martin Mac 2000 , Profile (24 channel)	190
24	Martin Mac 2000 , Profile (24 channel)	220
25	Martin Mac 600, Wash , 14 channel	250
26	Martin Mac 600, Wash , 14 channel	270
27	Martin Mac 600, Wash , 14 channel	290
28	Martin Mac 600, Wash , 14 channel	310